



# TileMaster™

## Hardware Manual

Tile Cover



Tile Plug



Tile Base



190mm


Tile Corner



Tile Edge




Step 1

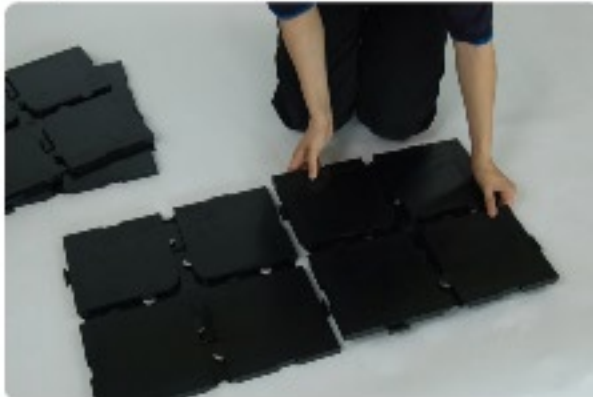

Once you have measured out your display area, place the corner tile down and attach the next tile using the dovetail joining mechanisms.

Step 2

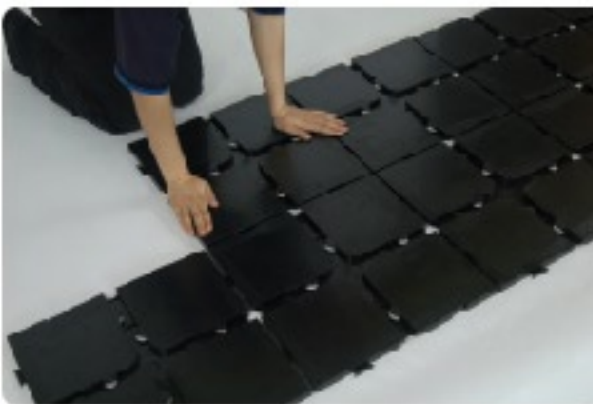

Continue this process till you create the complete floor space required.

Step 3



The TileMaster allows for hidden wiring to be run in a grid like fashion to any point on the floor. Start from where power is required and chase the wire along the built-in channels in the tile base.


Step 4



The chord should exit the tile work from the tile corner as shown here.

**Step 5**

Holding the tile cover, place the graphic on the underside and locate with both hands.

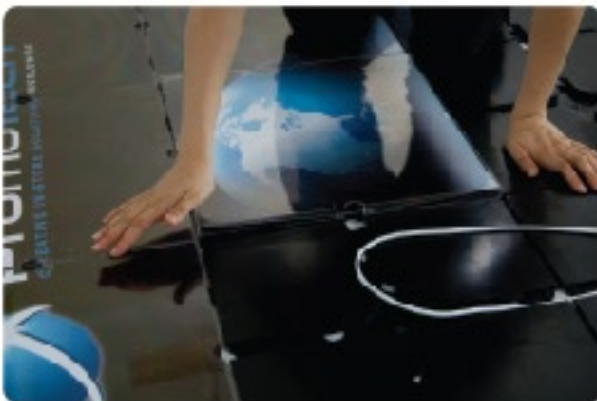**Step 6**

Place the tile cover over the base and push down to snap the cover into position.

**Step 7**

Where power is required hold the chord and position it in the semi-circular cut-out before snapping the cover down.

**Step 8**

All other port holes need to be covered with the tile plugs provided.

Step 9



TileMaster is now complete and ready for the placement of display stands and accessories.